


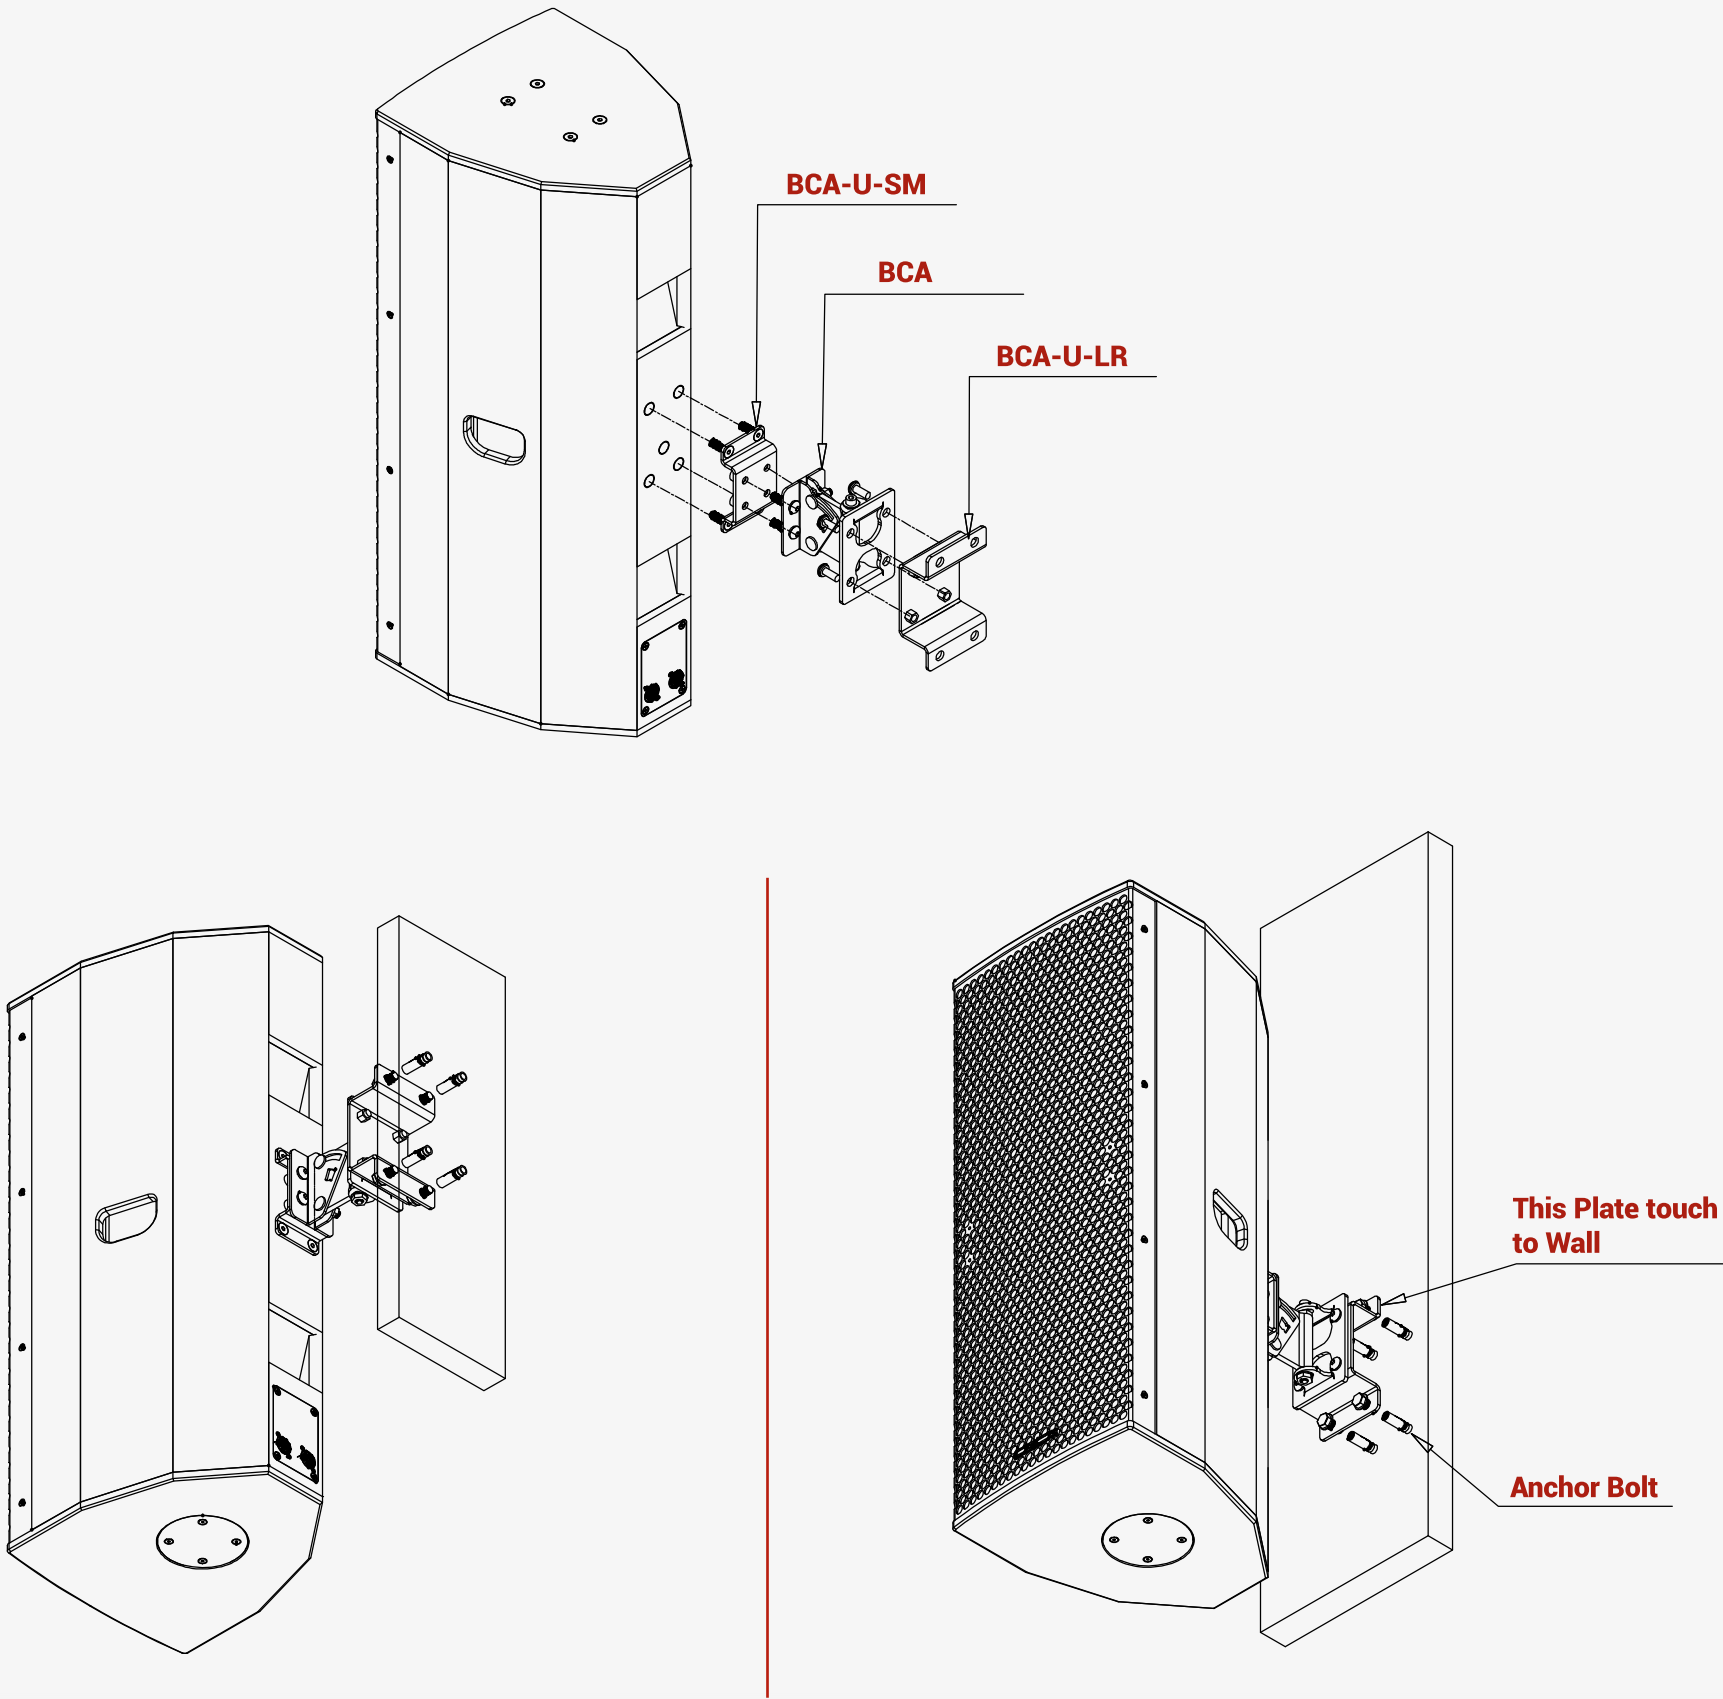


The illustration above displays the ceiling mounting arrangement for the CF 210/CF 210-N loudspeaker and identifies the essential hardware supplied.


Components

- Loudspeaker Mount BCA-II
- Anchor Bolts M8
- CF 210 / CF 210-N Loudspeaker
- BCA-U-LR and BCA-U-SM


CF 210 / CF 210-N Wall Mounting

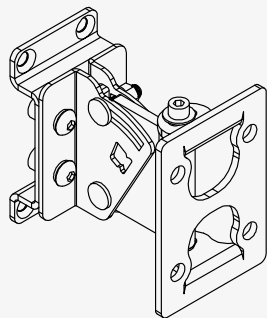


BCA-II
Clamp Assembly

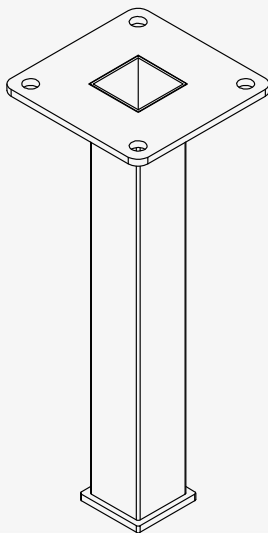


BCA-CE18"
Tube 50x50mm

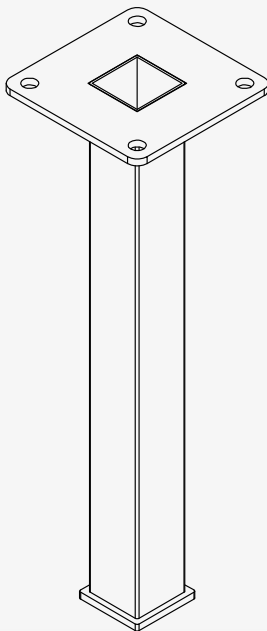

BCA-CE24"
Tube 50x50mm

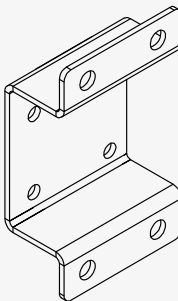

BCA-U-LR

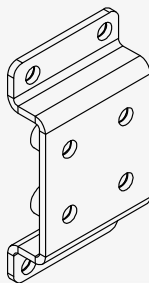

BCA-U-SM

How to mount the Loudspeaker?

- o Position BCA-II flat against the wall surface and mark the space for the bolts.
- o Insert the anchor bolts and tighten the mounts to wall
- o Remove the bolts from behind the cabinet and tighten it to the other end of the BCA II clamp.
- o To give space between the wall and the cabinet add BCA-U-LR and BCA-U-SM.

Caution: As the load is dynamic ensure the Loudspeaker is not mounted to any surface where the anchor bolts may get loose in the wall. This could result in a major accident.

This configuration ensures a stable, secure, and standards-compliant wall mounting for the CF 210 / CF 210-N loudspeaker, showing all hardware placement and component relationships clearly.