


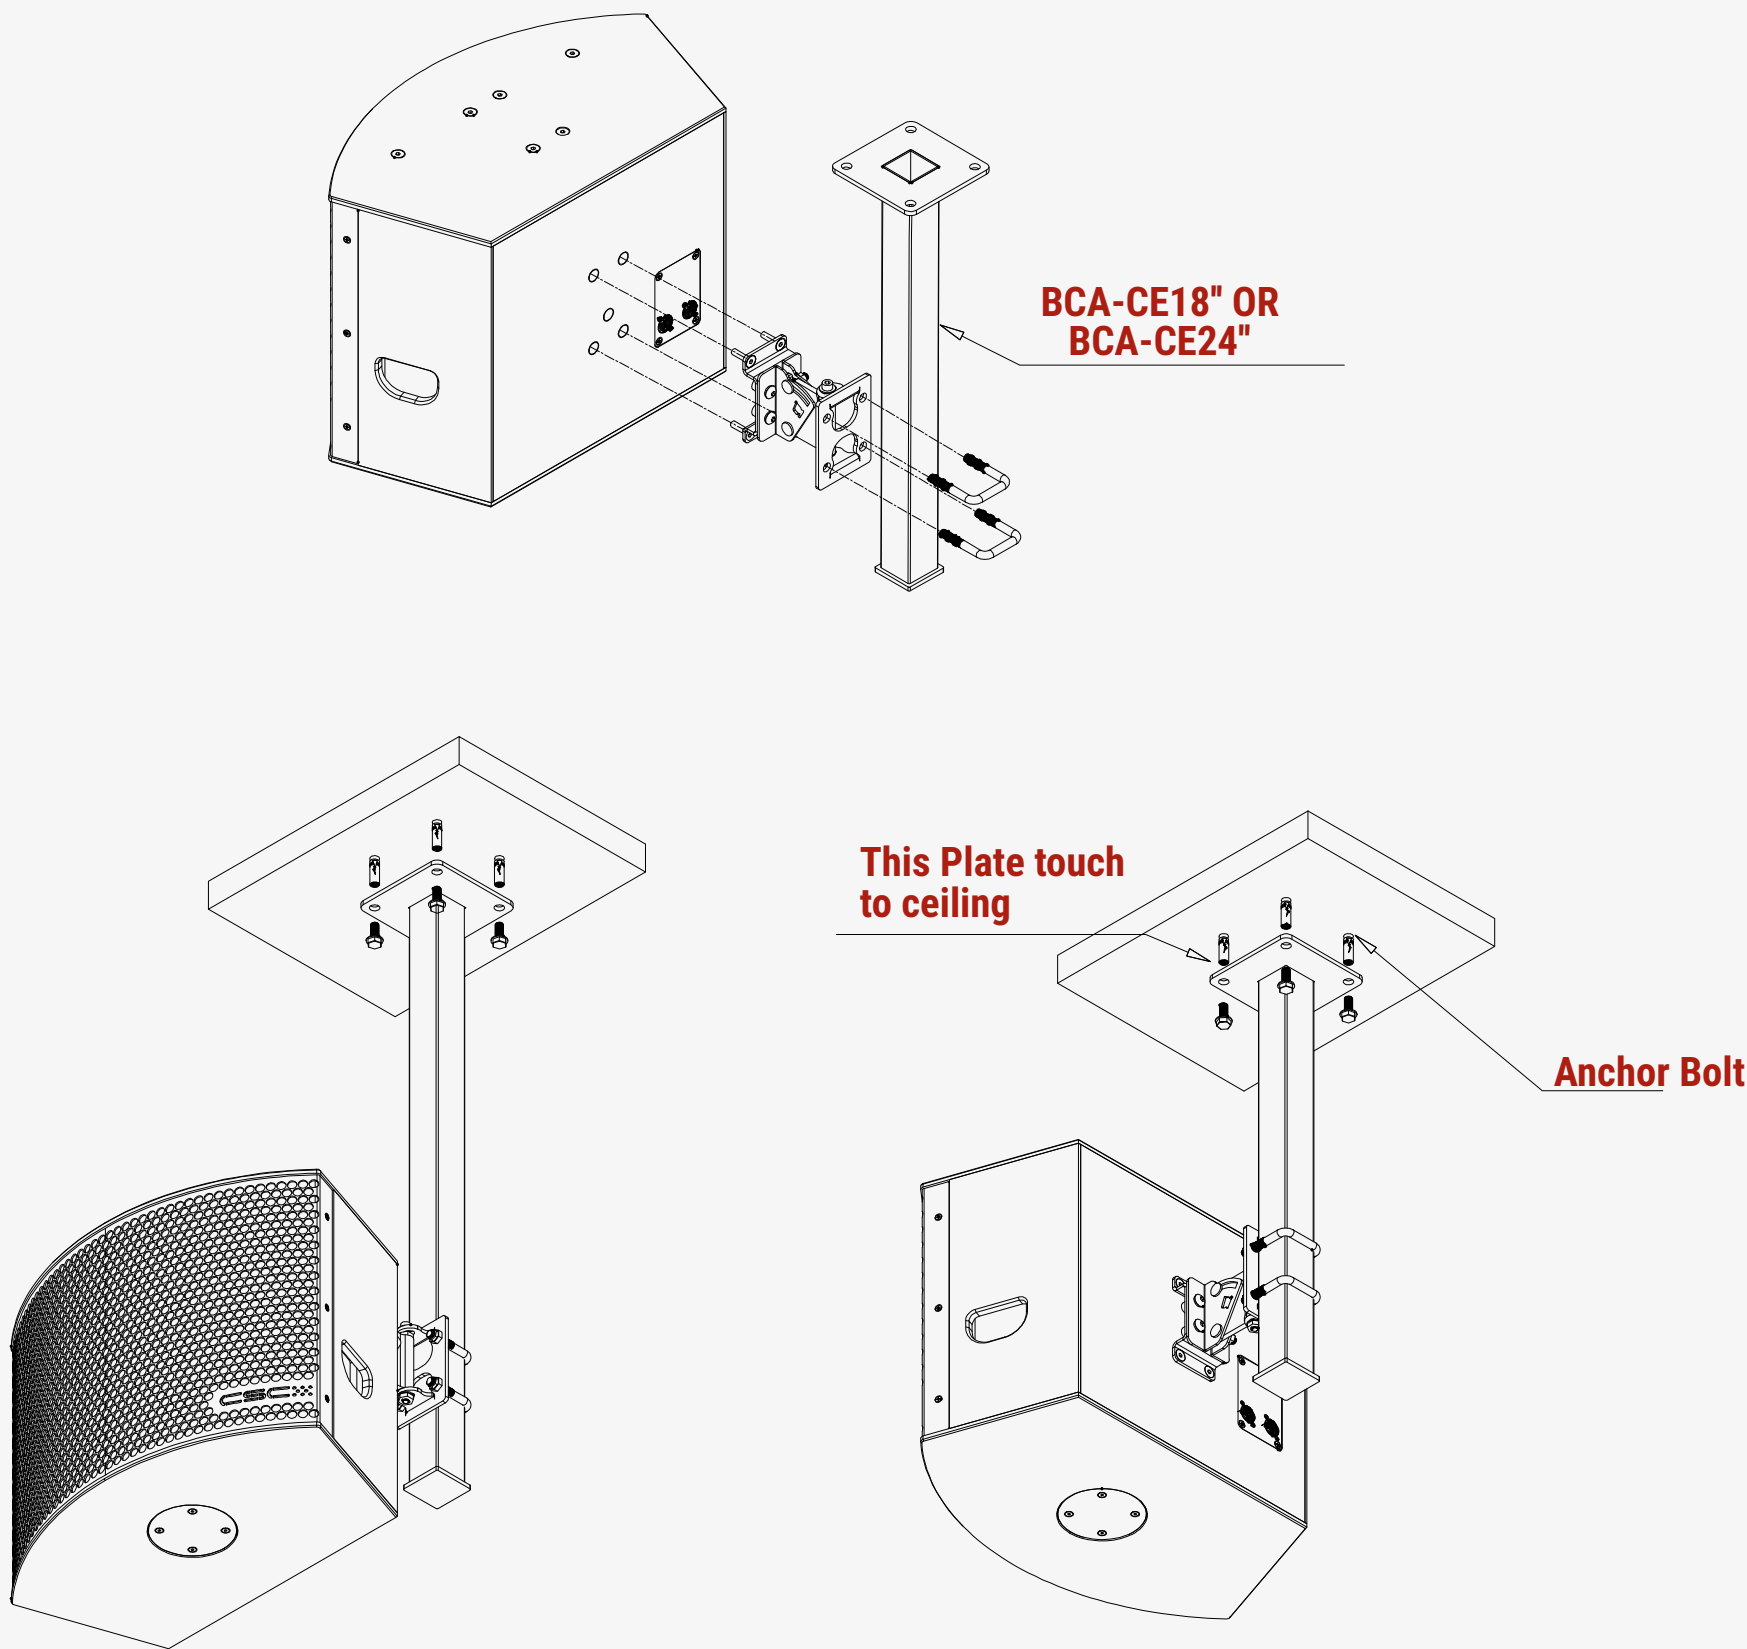

The illustration above displays the ceiling mounting arrangement for the STW28 / STW 28-16 loudspeaker and identifies the essential hardware supplied.

Components

- Loudspeaker Mount BCA-II
- Anchor Bolts M8
- Ceiling Extension BCA CE -18 or BCA CE-24with U clamps
- STW 28 / STW 28-16 Loudspeaker.

STW 28 / STW 28-16 Ceiling Mounting



How to mount BCA CE 18" or 24" to a ceiling?

- o Mark the position of the anchor bolts using the BCA CE 18" or 24" as template on the RCC ceiling.
- o Drill holes of adequate size to fix an M 8 anchor bolt into the RCC ceiling.
- o Insert the anchor bolt into the drilled holes.
- o Place the BCA 18" or 24" Extension's top plate on the RCC and tighten the bolts.

How to mount the Loudspeaker?

- o Tighten the BCA-II clamp on the BCA CE 18" or 24" as shown in the diagram using the U bolts provided with the extension
- o To fix the loudspeaker tighten the bolts (fixed and removed from the loudspeaker) to the BCA-II clamp

This configuration ensures a stable, secure, and standards-compliant ceiling mounting for the STW 28 / STW 28-16 loudspeaker, showing all hardware placement and component relationships clearly.